

Casio MIDI Guitars Replace these 14 Caps to fix tracking and trigger problems

