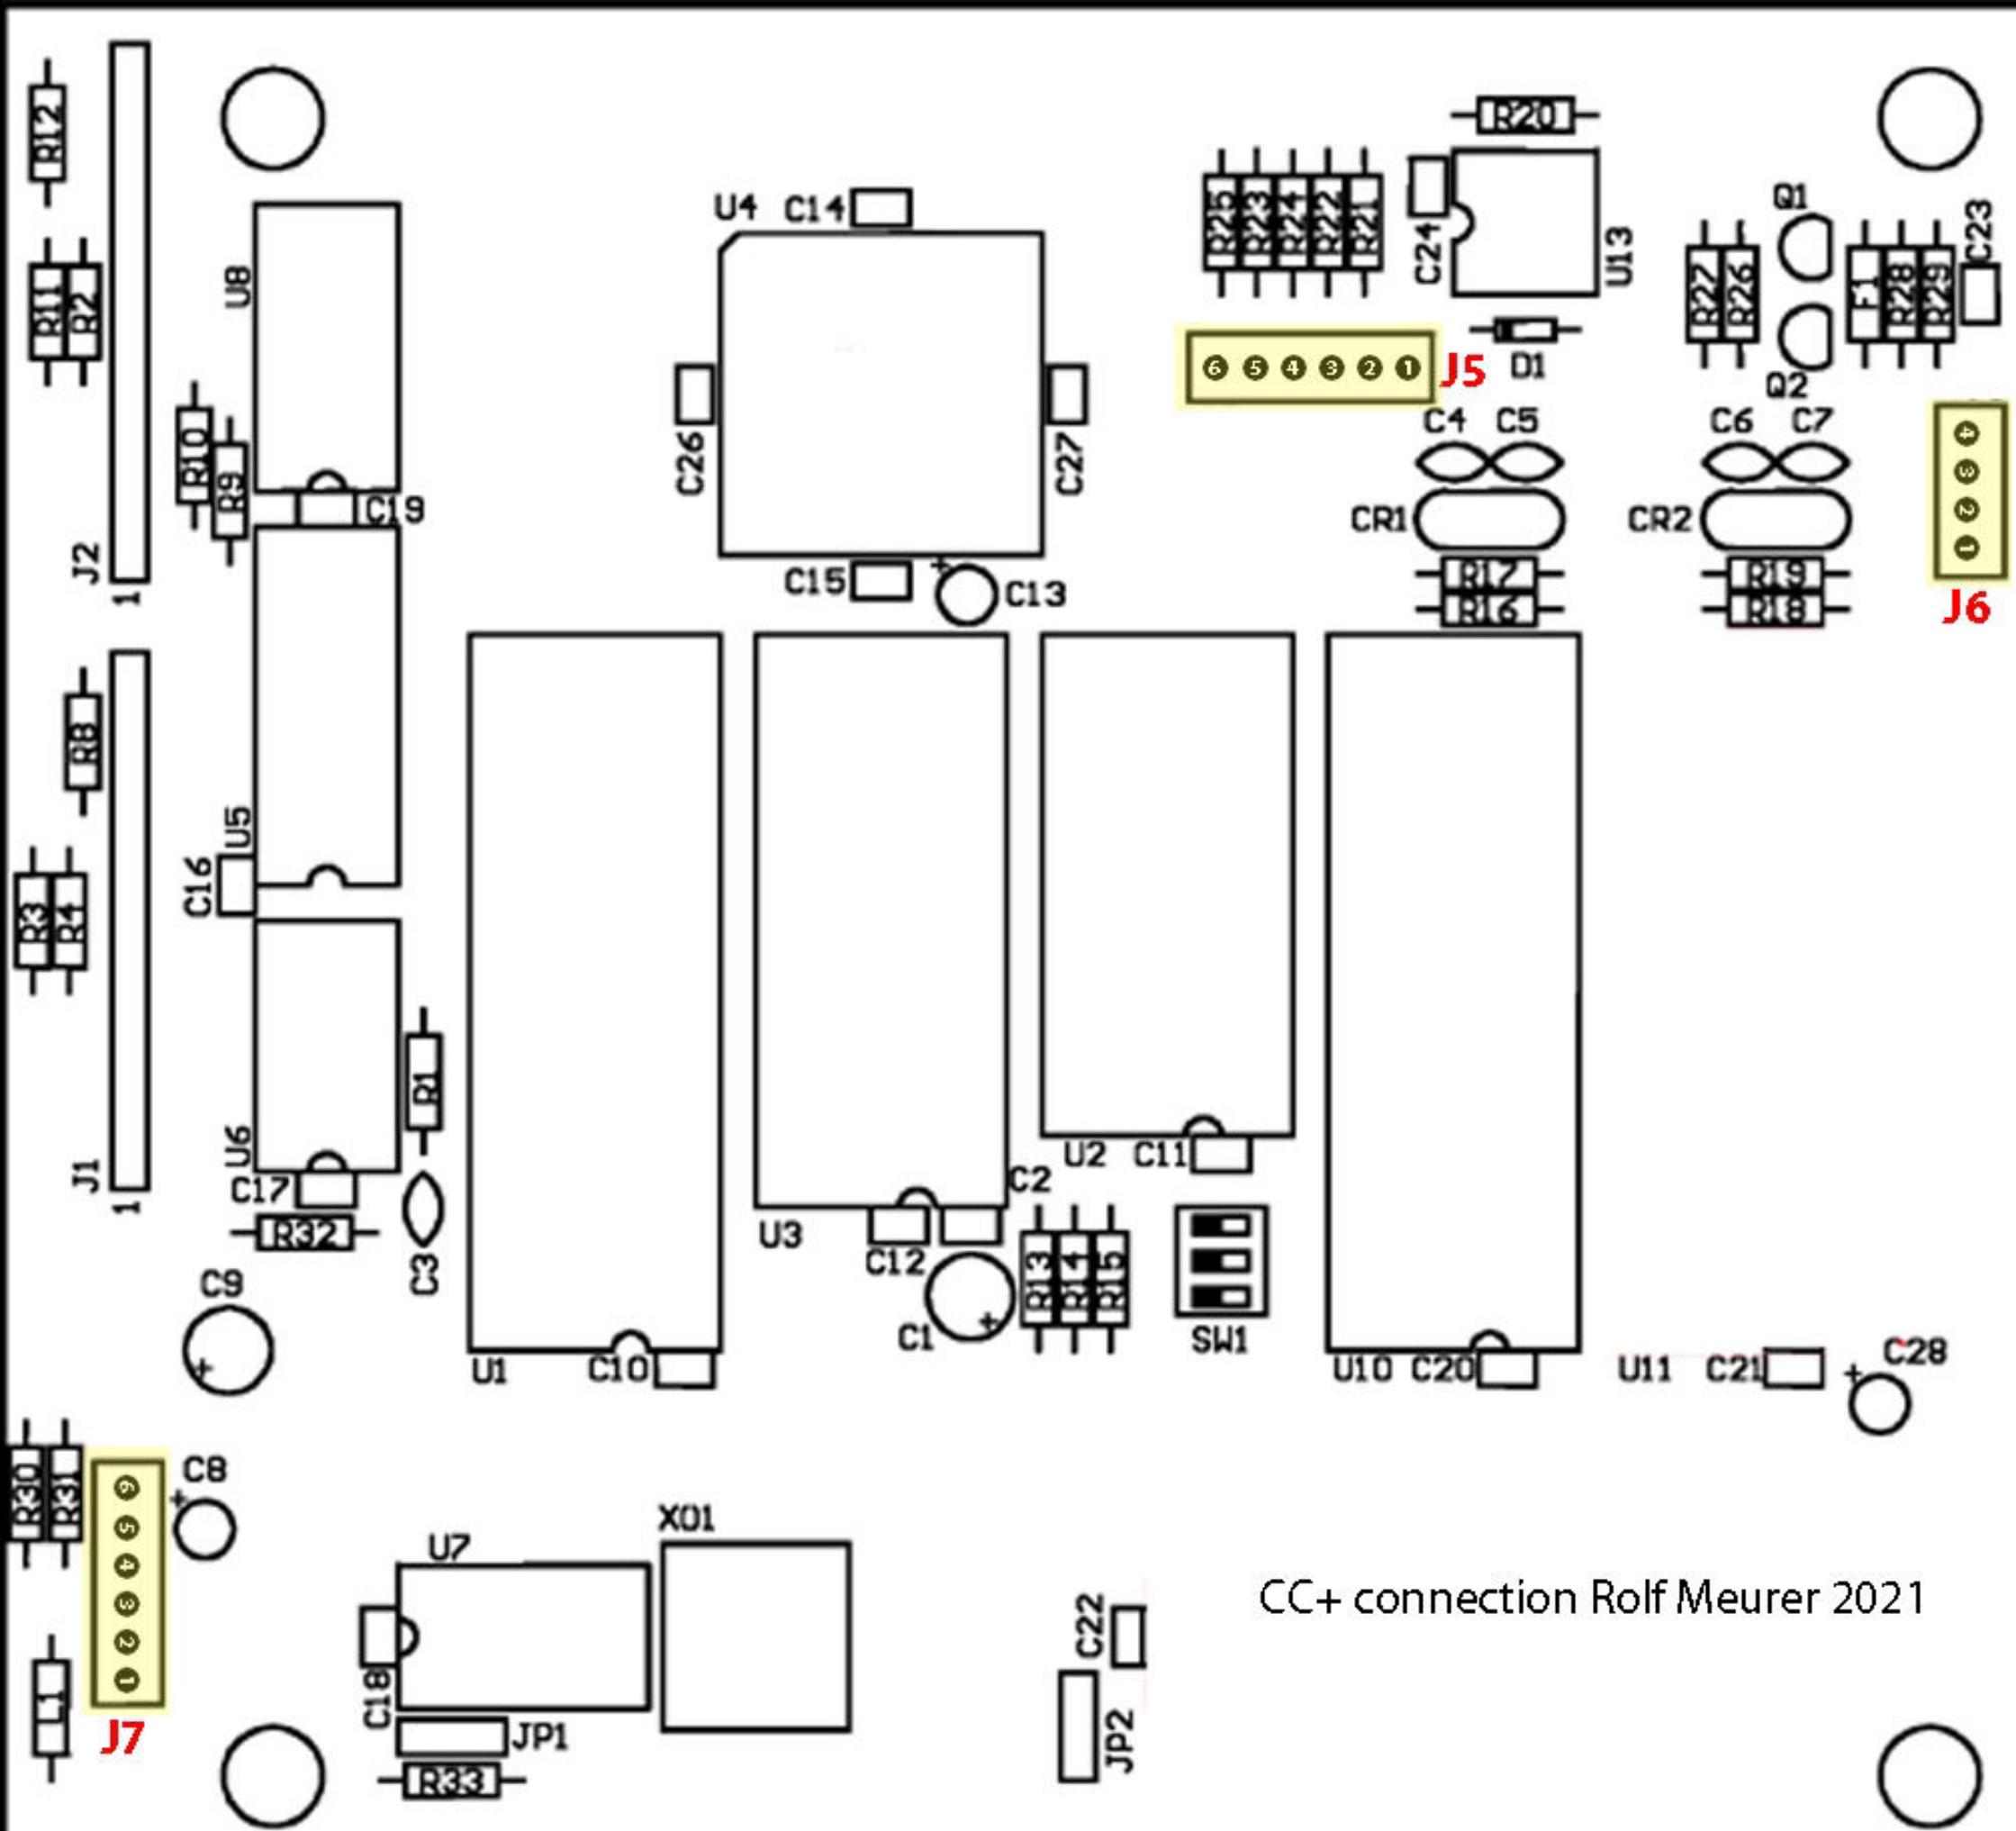


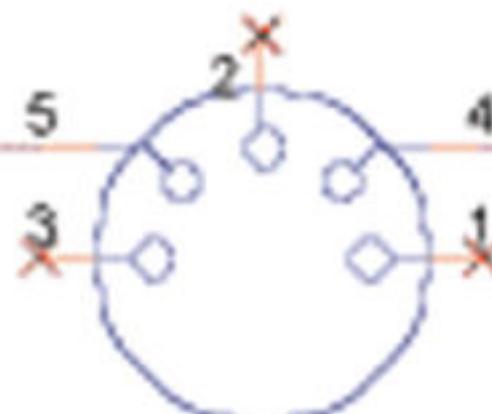
← OFF ON →

- | | |
|--------------------------|--|
| <input type="checkbox"/> | DIP SW#1 (On = Delayed Start, Off = Normal Operation) |
| <input type="checkbox"/> | DIP SW#2 (On = DAC Adjust/Service Mode, Off = Normal Operation) |
| <input type="checkbox"/> | DIP SW#3 (Reserved for future use - leave in Off for Normal Operation) |
- SW1



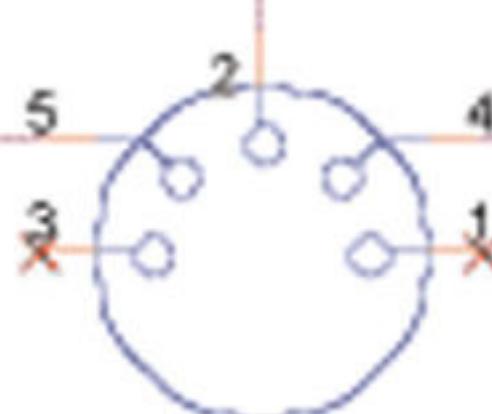
J5

MIDI_RX+
MIDI_RX-
MIDI_THR+
MIDI_THR-
MIDI_OUT+
MIDI_OUT-

**MIDI IN****J6**

LED+
LED1
LED2
LED_GND

LED1
(Green)
LED2
(Red)

**MIDI THRU****MIDI OUT**

CC+ wiring Rolf Meurer 2021